



Overview table Ultrasonic Sensors of the Series P41

Type / PDF Datasheet	Sensing Distance mm	Output	Connection	Adjustment Setpoint	Housing
P41-350-2P-CM12	350 - 3500	2 x PNP, NO/NC	CM12	Teach-in	PBT
P41-350-2N-CM12	"	2 x NPN, NO/NC	"	"	"
P41-350-U-CM12	"	0 .. 10V	"	"	"
P41-350-I-CM12	"	4 .. 20mA	"	"	"
P41-200-2P-CM12	200 - 2000	2 x PNP, NO/NC	CM12	Teach-in	PBT
P41-200-2N-CM12	"	2 x NPN, NO/NC	"	"	"
P41-200-U-CM12	"	0 .. 10V	"	"	"
P41-200-I-CM12	"	4 .. 20mA	"	"	"
P41-160-2P-CM12	80 - 1600	2 x PNP, NO/NC	CM12	Teach-in	PBT
P41-160-2N-CM12	"	2 x NPN, NO/NC	"	"	"
P41-160-U-CM12	"	0 .. 10V	"	"	"
P41-160-I-CM12	"	4 .. 20mA	"	"	"
P41-80-2P-CM12	100 - 800	2 x PNP, NO/NC	CM12	Teach-in	PBT
P41-80-2N-CM12	"	2 x NPN, NO/NC	"	"	"
P41-80-U-CM12	"	0 .. 10V	"	"	"
P41-80-I-CM12	"	4 .. 20mA	"	"	"
P41-50-2P-CM12	60 - 500	2 x PNP, NO/NC	CM12	Teach-in	PBT
P41-50-2N-CM12	"	2 x NPN, NO/NC	"	"	"
P41-50-U-CM12	"	0 .. 10V	"	"	"
P41-50-I-CM12	"	4 .. 20mA	"	"	"
P41-40-2P-CM12	40 - 400	2 x PNP, NO/NC	CM12	Teach-in	PBT
P41-40-2N-CM12	"	2 x NPN, NO/NC	"	"	"
P41-40-U-CM12	"	0 .. 10V	"	"	"
P41-40-I-CM12	"	4 .. 20mA	"	"	"