



Overviewtable

Ultrasonic Sensors of the Series P43

Type / PDF Datasheet	Sensing Distance mm	Output	Connection	Adjustment Setpoint	Housing
P43-600-Q50-PBT-2P- CM12	600 - 6000	2 x PNP, NO/NC	CM12	Cable Teach-in	Q50, PBT
P43-600-Q50-PBT-2N- CM12	"	2 x NPN, NO/NC	"	"	"
P43-600-Q50-PBT-U- CM12	"	0 .. 10V	"	"	"
P43-600-Q50-PBT-I- CM12	"	4 .. 20mA	"	"	"
P43-350-M30-PBT-2P- CM12	300 - 3500	2 x PNP, NO/NC	"	"	M30, PBT
P43-350-M30-PBT-2P-2m	"	"	Cable 2 m	"	"
P43-350-M30-PBT-2N- CM12	"	2 x NPN, NO/NC	CM12	"	"
P43-350-M30-PBT-2N- 2m	"	"	Cable 2 m	"	"
P43-350-M30-PBT-U- CM12	"	0 .. 10V	CM12	"	"
P43-350-M30-PBT-U-2m	"	"	Cable 2 m	"	"



AE Sensors B.V.
Postbus 9084
3301 AB Dordrecht (NL)

Tel.: +31 (0)78 6213152

Type / PDF Datasheet	Sensing Distance mm	Output	Connection	Adjustment Setpoint	Housing
P43-350-M30-PBT-I-CM12	"	4 .. 20mA	CM12	"	"
P43-350-M30-PBT-I-2m	"	"	Cable 2 m	"	"
P43-200-M18-PBT-2P-CM12	200 - 2000	2 x PNP, NO/NC	CM12	"	M18, PBT
P43-200-M18-PBT-2P-2m	"	"	Cable 2 m	"	"
P43-200-M18-PBT-2N-CM12	"	2 x NPN, NO/NC	CM12	"	"
P43-200-M18-PBT-2N-2m	"	"	Cable 2 m	"	"
P43-200-M18-PBT-U-CM12	"	0 .. 10V	CM12	"	"
P43-200-M18-PBT-U-2m	"	"	Cable 2 m	"	"
P43-200-M18-PBT-I-CM12	"	4 .. 20mA	CM12	"	"
P43-200-M18-PBT-I-2m	"	"	Cable 2 m	"	"
P43-160-M18-PBT-2P-CM12	80 - 1600	2 x PNP, NO/NC	CM12	"	"
P43-160-M18-PBT-2P-2m	"	"	Cable 2 m	"	"



AE Sensors B.V.
Postbus 9084
3301 AB Dordrecht (NL)

Tel.: +31 (0)78 6213152

Type / PDF Datasheet	Sensing Distance mm	Output	Connection	Adjustment Setpoint	Housing
P43-160-M18-PBT-2N- CM12	"	2 x NPN, NO/NC	CM12	"	"
P43-160-M18-PBT-2N- 2m	"	"	Cable 2 m	"	"
P43-160-M18-PBT-U- CM12	"	0 .. 10V	CM12	"	"
P43-160-M18-PBT-U-2m	"	"	Cable 2 m	"	"
P43-160-M18-PBT-I- CM12	"	4 .. 20mA	CM12	"	"
P43-160-M18-PBT-I-2m	"	"	Cable 2 m	"	"
P43-80-M18-PBT-2P- CM12	100 - 800	2 x PNP, NO/NC	CM12	"	"
P43-80-M18-PBT-2P-2m	"	"	Cable 2 m	"	"
P43-80-M18-PBT-2N- CM12	"	2 x NPN, NO/NC	CM12	"	"
P43-80-M18-PBT-2N-2m	"	"	Cable 2 m	"	"
P43-80-M18-PBT-U- CM12	"	0 .. 10V	CM12	"	"
P43-80-M18-PBT-U-2m	"	"	Cable 2 m	"	"



Type / PDF Datasheet	Sensing Distance mm	Output	Connection	Adjustment Setpoint	Housing
P43-80-M18-PBT-I- CM12	"	4 .. 20mA	CM12	"	"
P43-80-M18-PBT-I-2m	"	"	Cable 2 m	"	"
P43-50-M18-PBT-2P- CM12	60 - 500	2 x PNP, NO/NC	CM12	"	"
P43-50-M18-PBT-2P-2m	"	"	Cable 2 m	"	"
P43-50-M18-PBT-2N- CM12	"	2 x NPN, NO/NC	CM12	"	"
P43-50-M18-PBT-2N-2m	"	"	Cable 2 m	"	"
P43-50-M18-PBT-U- CM12	"	0 .. 10V	CM12	"	"
P43-50-M18-PBT-U-2m	"	"	Cable 2 m	"	"
P43-50-M18-PBT-I- CM12	"	4 .. 20mA	CM12	"	"
P43-50-M18-PBT-I-2m	"	"	Cable 2 m	"	"
P43-40-M18-PBT-2P- CM12	30 - 400	2 x PNP, NO/NC	CM12	"	"
P43-40-M18-PBT-2P-2m	"	"	Cable 2 m	"	"



Type / PDF Datasheet	Sensing Distance mm	Output	Connection	Adjustment Setpoint	Housing
P43-40-M18-PBT-2N- CM12	"	2 x NPN, NO/NC	CM12	"	"
P43-40-M18-PBT-2N-2m	"	"	Cable 2 m	"	"
P43-40-M18-PBT-U- CM12	"	0 .. 10V	CM12	"	"
P43-40-M18-PBT-U-2m	"	"	Cable 2 m	"	"
P43-40-M18-PBT-I- CM12	"	4 .. 20mA	CM12	"	"
P43-40-M18-PBT-I-2m	"	"	Cable 2 m	"	"
P43-25-M12-ST-P-CM12	25 - 250	1 x PNP, NO/NC	CM12	"	M12, Stainless Steel
P43-25-M12-ST-N-CM12	"	1 x NPN, NO/NC	"	"	"
P43-25-M12-ST-U-CM12	"	0 .. 10V	"	"	"
P43-25-R40-PBT-P-CM8	"	1 x PNP, NO/NC	CM8	"	R40, PBT
P43-25-R40-PBT-N-CM8	"	1 x NPN, NO/NC	"	"	"
P43-25-R40-PBT-U-CM8	"	0 .. 10V	"	"	"



AE Sensors B.V.
Postbus 9084
3301 AB Dordrecht (NL)

Tel.: +31 (0)78 6213152
